


FITTING INSTRUCTIONS
 EINBAUANLEITUNG
 INSTRUCCIONES DE MONTAJE
 NOTICE DE MONTAGE
 ISTRUZIONI DI MONTAGGIO
 INSTRUKCJA MONTAŻU
 INSTRUÇÕES DE MONTAGEM
 ИНСТРУКЦИЯ ПО УСТАНОВКЕ


micronAir®

Audi	A3	10.96 ->	05.03	21651912
Audi	TT	09.98 ->	10.05	CP1027
Seat	Arosa	02.97 ->	05	MP044
Seat	Cordoba	09.93 ->	06.99	
Seat	Ibiza I+II	09.93 ->	02.02	21651955
Seat	Inca	11.95 ->		CC1027
Seat	Toledo II	04.99 ->		MC544
Skoda	Octavia I	09.96 ->	09.04	
Skoda	Superb	02.02 ->		
Volkswagen	Beetle	01.98 ->		
Volkswagen	Caddy II	11.95 ->	01.04	BL544
Volkswagen	Golf III	07.93 ->	04.99	
Volkswagen	Lupo	10.98 ->	09.05	
Volkswagen	Passat B6	10.00 ->	09.05	
Volkswagen	Polo	11.94 ->	09.01	
Volkswagen	Vento	11.91 ->	09.98	


Audi, A3/VW Polo

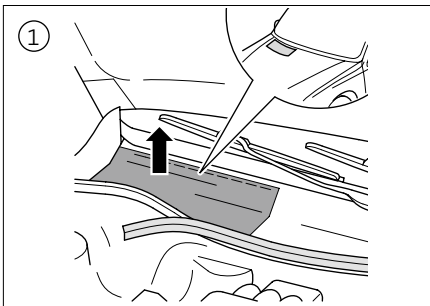




Seat Arosa/Cordoba/Ibiza/Inca/Toledo

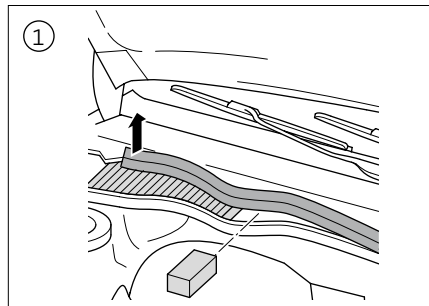

Skoda Oktavia

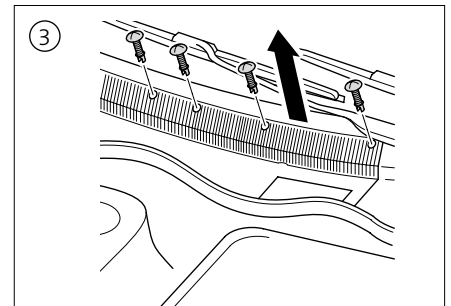

VW Golf/Vento

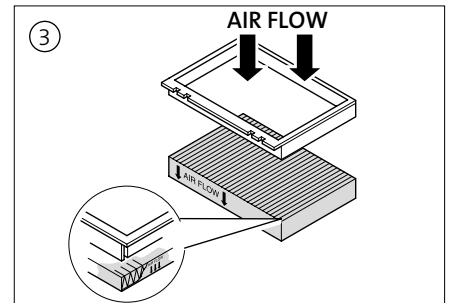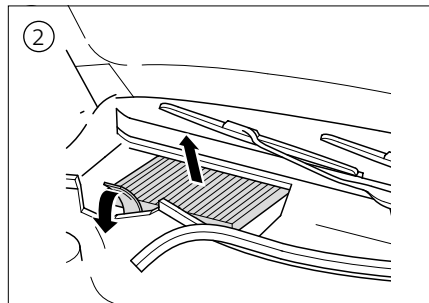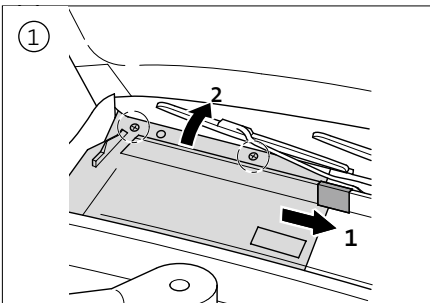

④

10.000 KM
6.200 M

½ yearly*

*according to VDI 6032